
HEAT PRESS JTSB-S-2

EN Start Here

TC 入門指南

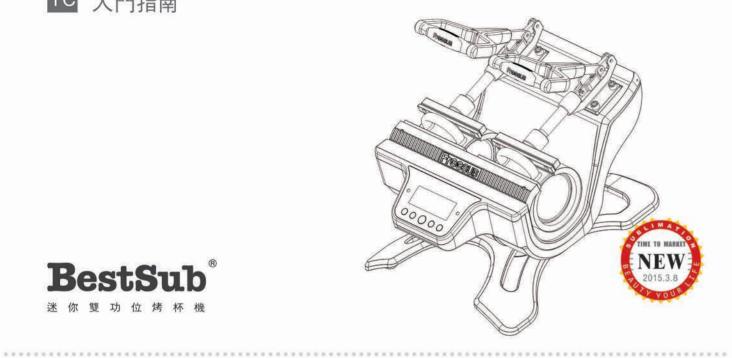

warnings must be followed carefully to avoid bodily injury. 必須嚴格遵守警告事項以免身體受損。



Unpacking 拆裝

Contents may vary by location 内容可能因爲地區而有所不同

> Please remove the packing foam carefully and keep well for maintenance. 請小心移除設備外包裝泡沫。并保存好該包裝材料,以備保維修時使用。



警 示 caution

- 1.請使用能負載機器額定功率的電源
- 2.保持設備的通風,遠離易然物品
- 3.將設備放置在水平平坦的表面
- 4.在儲存/運輸和運行環境中,請注意防水











Remove all protective materials.

Feature commentary 控制面板詳解

() 電源開關

倒計時開始

淮入設置

數值增加

數值減少

加熱狀態





Press power button at back of the machine, it will start to heat and air inflating by itself after five seconds.



Press left button. start heating Press right button, start heating.



State 1: Short press to set temperature. Press again to set time. Press again to quit. State 2: Press 5 seconds

temperature to

burning.

avoid mug pad air

to set pre-heating




State 1: Press TIMING one time to start. State 2: Press 4 seconds to reset. State 3: Can be used as "+" and "-" under stand-by state.



State 1: You can increase value under setting state. State 2: Press 2 seconds, hear one beep, you can press "-"to set processing capacity.



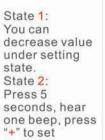



打開機器後面船形 電源開關,機器通 電,5秒後自動開 始加熱并衝氣。



打開左邊加熱開始 打開右邊加熱開始



狀態1:

短按進入溫度設置 再按進入時間設置 再按退出 狀態2: 長按5秒進入預熱 溫度設置,預防烤 杯墊空燒。



狀態1:

狀態2:

狀態3:

+ -號使用

狀態1: 按一下倒計時開始 加數值。 狀態2: 長按4秒計時復位 在待機狀態下可當 設置加工數量。



狀態1: 在設置狀態下可增 長按2秒後滴一聲 響後再按-鍵,可



processing

capacity.

在設置狀態下可減 少數值。 狀態2: 長按5秒後滴一聲 響後再按+鍵,可 設置加工數量。

组合键功能解说

1、預熱溫度設置









長按5秒時入預熱溫度設置,出廠 初始溫度爲100度。






先長按"+"2秒聽到蜂鳴一聲,"+"不鬆開, 再按下"-",蜂鳴一聲。進入計數設置。 鬆開按鍵後,按"+""-"調節加工數量。

3、總量統計



先長按 "-" 2秒聽到蜂鳴一聲, "-" 不鬆開, 再按下"+",蜂鳴一聲。進入從出廠到當前 總的數量統計。

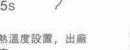

Function Commentary of Combination Key

1, pre-heat temperature setting



Press 5 seconds start pre-heat temperature setting. Factory default temperature is 100°C.

2, processing capacity setting






Press "+" for two seconds, hear one beep, keep press. Then press "-", after hear one beep, you can set. Release button, press "+" and "-" to set amount.

3, gross statistics



Press "-" for two seconds, hear one beep, keep press. Then press "+", after hear one beep, you can see the gross statistics from factory default to now.

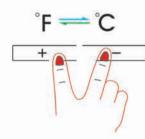

注意:同時按住(+/-)鍵可快速實現攝氏度 和華氏度之間的轉换。

Attention: Press (+/-) at the same time, you can switch between °F &°C.

Accessory Name Graphic 配件名稱圖解

1、右压力手柄

右调节螺丝

右烤杯垫

电路主板

6、镁合金底座

前电路盖板

左烤杯垫

8、左调节螺丝

9、左压力手柄

10、烤杯垫接线位

1.right pressure handle

2.right adjusting screw

3.right mug pad

4.circuit board

5.front circuit cover


6.magnesium alloy base

7.left mug pad

8.left adjusting screw

9.left pressure handle

10.mug pad terminal block

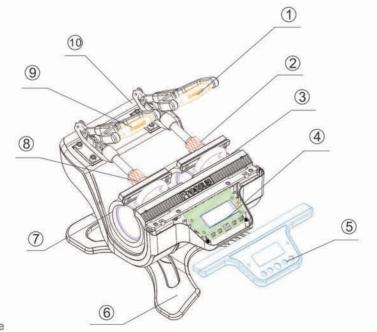

connection method 電路板的接綫方法

2 power cord colors 電源綫的顏色



Answers to

常見問題解答

questions

= 7、右温度探头

■ 8、左温度探头

1、白色(主進綫+)

2、咖啡色(主進綫-)

3、兰色(左发热垫+) 4、红色(右发热垫+)

■ 5、黑色 (左发热垫-)


■ 6、黑色 (右发热垫-)

1, white 2. coffee

3, blue

4, red 5, black

6, black

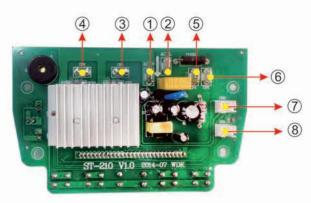

Transfer tips

7, right temperature detector

8. left temperature detector

Question: Transfer paper shows yellow after printing. Or writings on the picture seems faint. Answer: Lower temperature and reduce the heating time. Question: Paper still keep white after printing, and picutre color on products don't show good. Sometimes get white stain Answer: Higher temperature and increase time. Question: Effect is not good in some condition. Answer: The temperature and time have to be changed accordintly due to different paper, products, machines and weather condition.

轉印技巧:

轉印時如紙發黃、圖片黑色文字發虚時,應降低温度和減少時間,如:轉印紙還是白色、圖片色彩不鮮艷,有白色斑點或部分沒有轉印上去,請加高温度或延長時間。全黑圖片應加長轉印時間, 因産品種類、圖片色彩、紙張不同、機器温差、天氣温差等不同 原因,轉印時温度及時間會有一些微調。





	WARRANTY CARD	
	WARRANTICARD	
用户姓名 The name:		
聯系方式 Contact:		
購買日期 Date:		
經 銷 商 Dealer:		

Pr	oduct certifica	
	産品合格證	
檢驗員		
	ner:	
Date:		

BestSub